


DPC Perimeter cavity detail – single rebate

- Calculate the required width of DPC based on width of brick, height of rebate, envelope under bottom plate,+150 mm up the frame above finished floor level.
- Double the HomeGuard® DPC over and affix to the concrete slab using concrete galvanised clouts (1M spacing maximum) or an approved adhesive.
- Ensure that the fold passes fully under the bottom plate.
- One leading edge of the sheet should extend across the perimeter cavity and tie into the external brickwork. The other leading edge of the sheet should be extended vertically against the timber stud and pinned to the timber wall studs, as the commercial DPC would be installed (150 mm up the frame and fixed with Galvanized tack at a maximum 300 mm intervals).

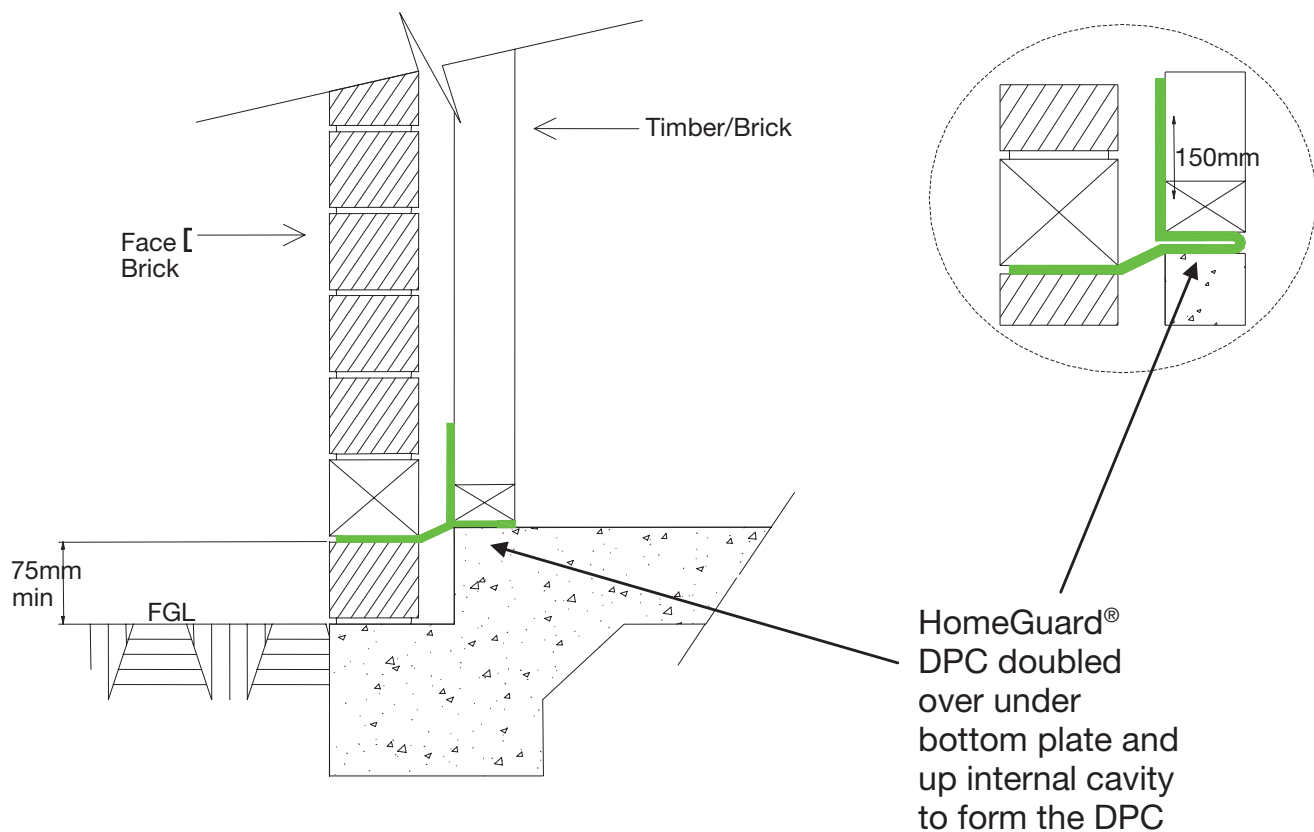

Note: HomeGuard® DPC white is the only FMC product approved for this use.

421002



Please always refer to the HomeGuard® Installation Manual for further information