


## HomeGuard® FlexiCollar installation

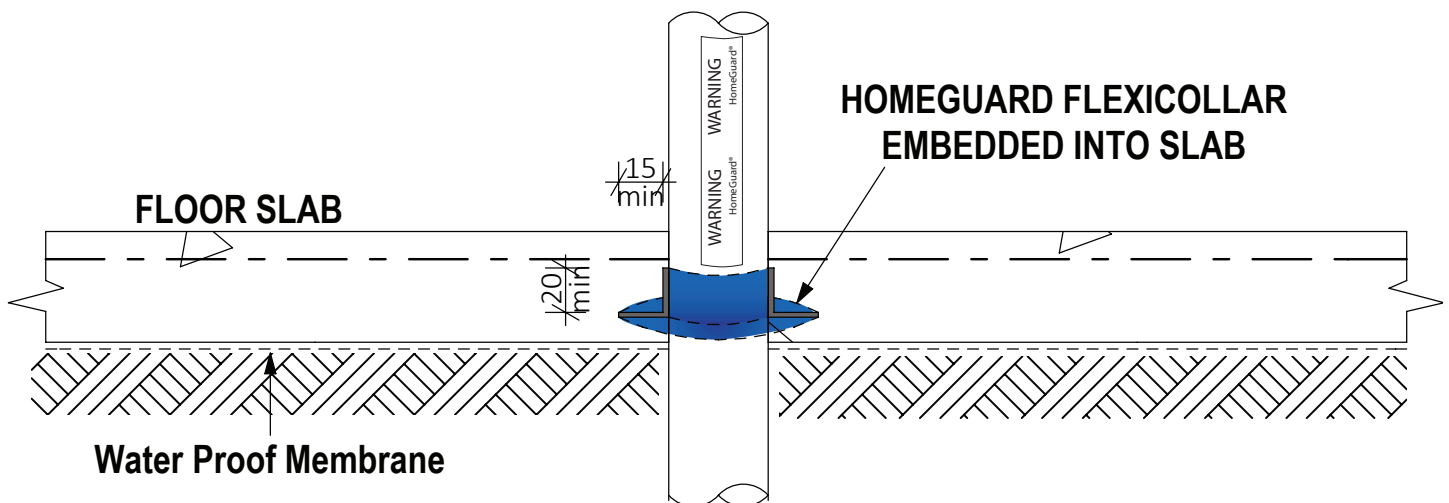

- Slip the collar over the penetration pipe and push it down to a depth where it will be fully integrated within the concrete pour.
- Do not glue the HomeGuard® FlexiCollar to the pipe.
- Secure one “cable tie” around the collar to attach it firmly to the penetration.
- Place HomeGuard® warning tape on protected pipes from just above where the collar sits all the way up to the top of the pipe, ensure HomeGuard® warning tape is facing the street, this makes it easier for construction professionals like supervisors to gauge quickly if the project has had the HomeGuard® FlexiCollars installed prior to the concrete pour

Ensure the HomeGuard® Collar being used is the correct size to suit the application e.g. 100 mm pipe requires a 100 mm HomeGuard® FlexiCollar – if the pipe is an un-common size you are required to create a sheet collar from either HomeGuard® TMB, PB, or DPC to achieve a tight snug fit – refer to the HomeGuard® Manual for instructions.

521008



Please always refer to the HomeGuard® Installation Manual for further information