


Side Fixing

Using HomeGuard® Termiflex to attach HomeGuard® sheets to concrete slabs

The process of fixing HomeGuard® DPC or HomeGuard® PB to the side of a slab, using HomeGuard® Termiflex, can only be completed after the required brick courses have been installed by the bricklayer

- Ensure that the slab is dry, cured, clean, dust free and free of large lumps of concrete, mortar or any other substance which may interfere with the HomeGuard® Termiflex adhering to the concrete surface.
Note: HomeGuard® Termiflex adheres best to dry concrete surfaces.
- Ensure that all depressions in the concrete surface are filled with HomeGuard® Termiflex to create a complete, uniform and continuous bond and seal.

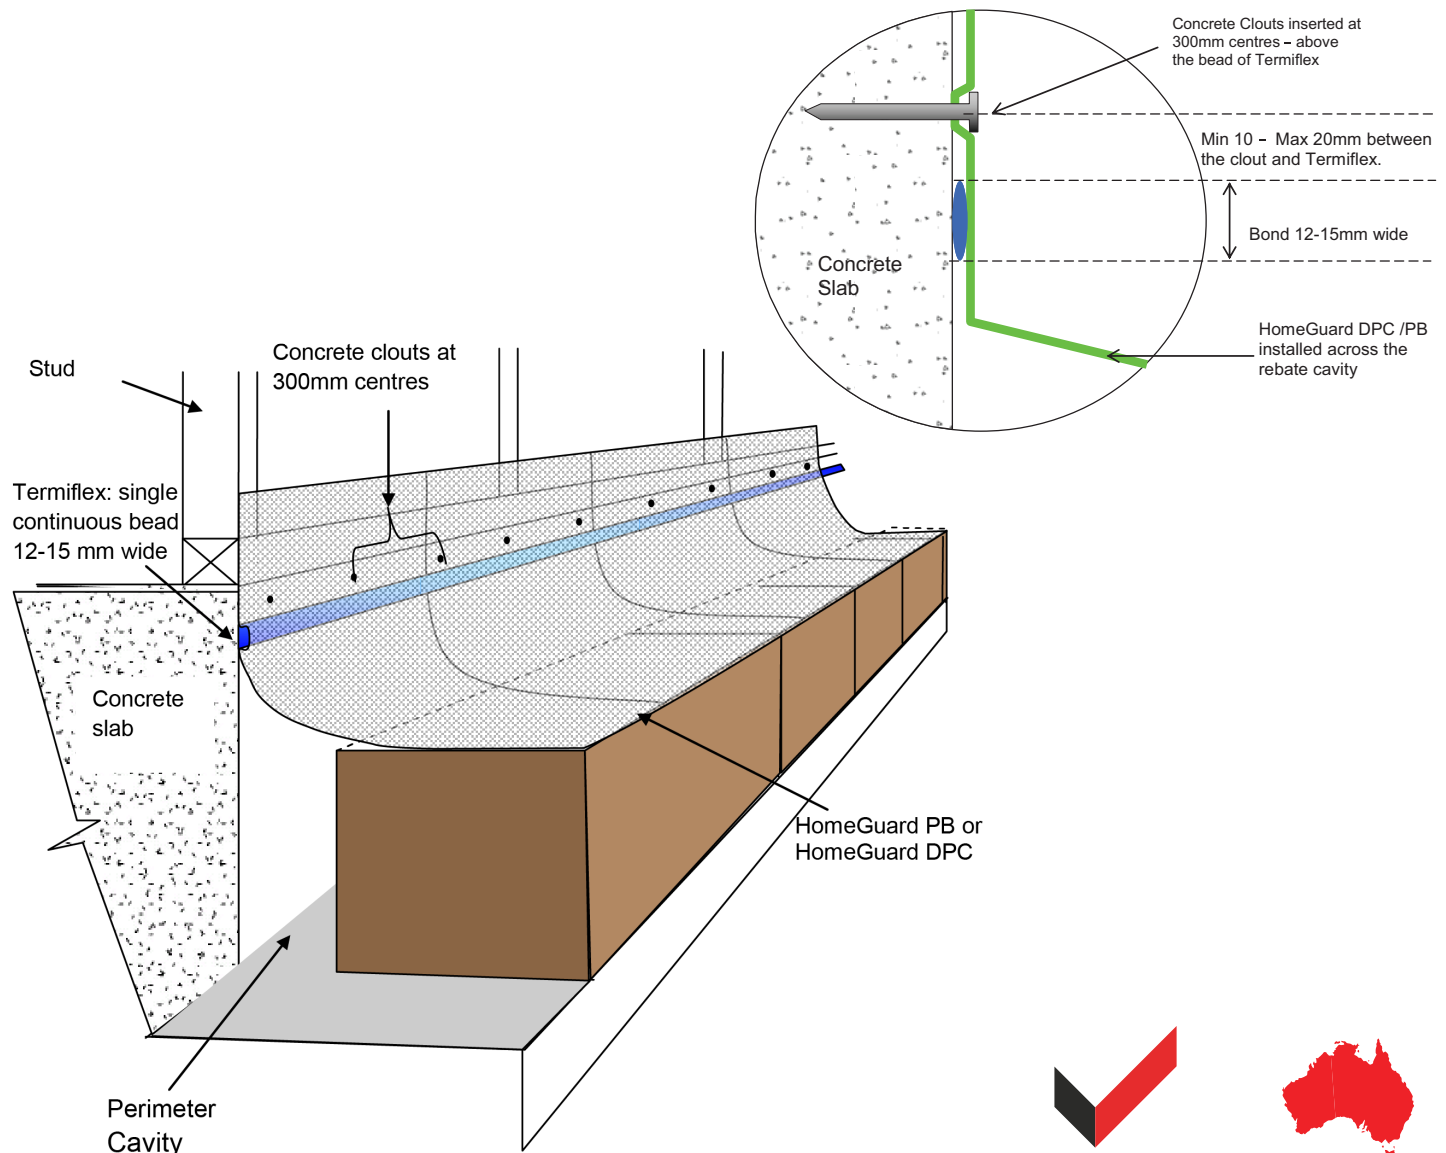

521006



Please always refer to the HomeGuard® Installation Manual for further information