



Commercial Detail

Concrete Tilt Panels

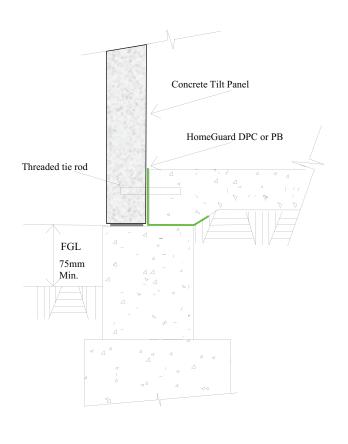

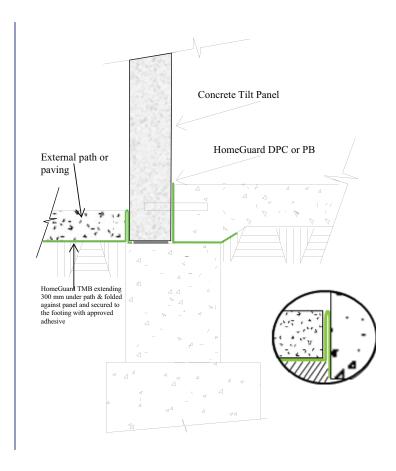

- Ensure communication with builder for installation timing.
- Ensure you have calculated the correct width of product required including envelope, slab height and construction joint.





521007

Please always refer to the HomeGuard® Installation Manual for further information

