



HomeGuard® Termiflex - Control Joints

HomeGuard® Termiflex can be used to form part of a complete and continuous termite management system in control joints. Control joint gaps **MUST** be filled with Termiflex to a depth of at least 20 mm


Saw Joint

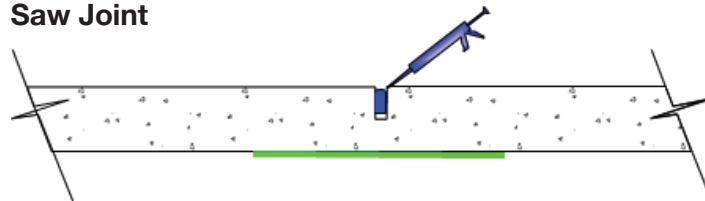

Dowel joint

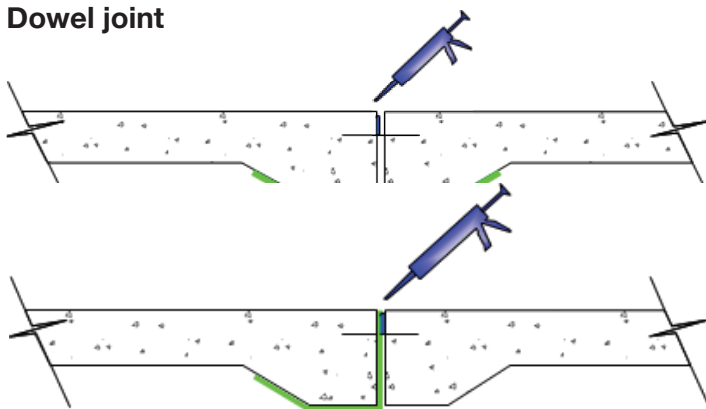

Key joint

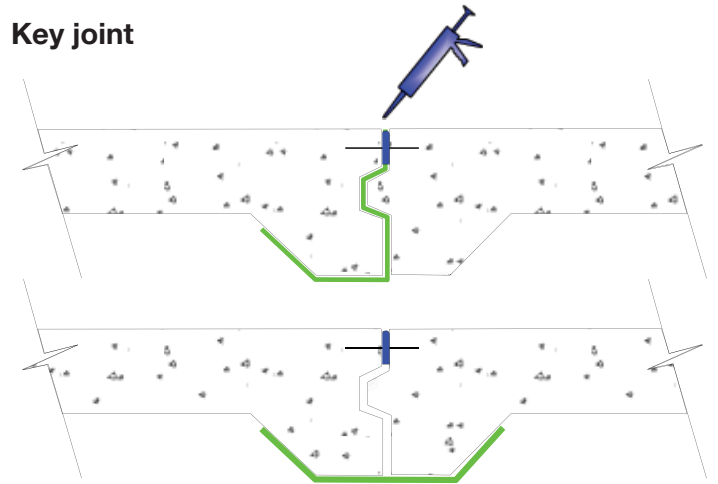

APPLICATION

1. Surface must be clean, dry, free from dust, loose particles and soap residues. If required clean with turps.
2. Cut cartridge at 45° to form a bead 4-6 mm in diameter.
3. Apply firmly onto surface or into joint by pushing sealant ahead of nozzle, making a thick continuous bead.
4. If necessary, smooth sealant immediately with tool dipped in turps. Refer to the HomeGuard® Product Manual for further installation instructions.

Do not use on cracks larger than 10 mm as this may require an alternative joint sealer .

Drying Time: Skins immediately, maximum toughness achieved over several days.

Clean Up: Turps. Remove dried sealant from skin by gently rubbing with petroleum jelly.

Notes: May damage some plastics e.g. polystyrene, polycarbonate. Not for permanent water immersion.
When cold, store at room temperature for easier use.

FMC will not warrant gaps in the barrier caused by extensive slab movement in the control joint.

821027



Certified



Manufactured in Australia

Please always refer to the HomeGuard® Installation Manual for further information