
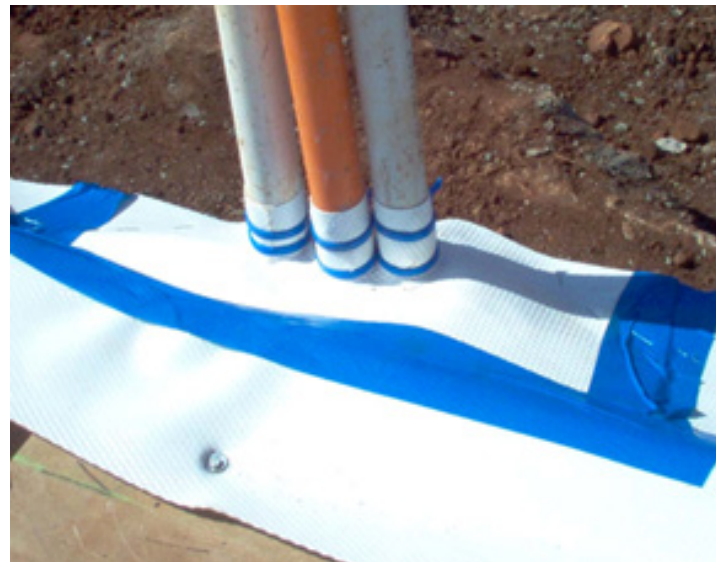


## Multiple Penetrations and Clusters

Treating clusters of penetrations can be tricky you often don't have enough room to do what you want to do. We recommend following below for best results.

Treat each penetration separately ensuring that a minimum of 100 mm of HomeGuard® sheet extends from each penetration and the HomeGuard® sheet is overlapping between each of the penetrations.

- In order to hold the collar in place, affix two cable ties per penetration.
- The HomeGuard® sheet collar must be constructed from the same grade HomeGuard® sheet as that which the service penetration has penetrated. ie: HomeGuard® TMB for full under slab penetrations and HomeGuard® DPC or HomeGuard® PB for perimeter cavity penetrations.

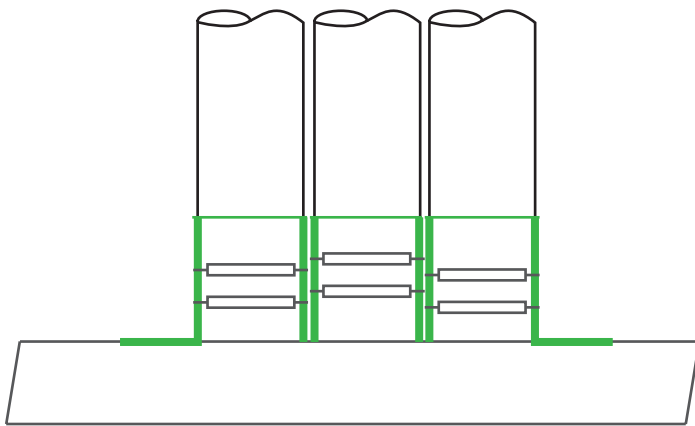

*Above: Multiple penetrations in the perimeter cavity using HomeGuard® DPC*

821030



Certified



Manufactured in Australia

Please always refer to the HomeGuard® Installation Manual for further information