


Side Fixing

Using HomeGuard® Termiflex to attach HomeGuard® sheets to concrete slabs

- Ensure that the slab is dry, cured, clean, dust free and free of large lumps of concrete, mortar or any other substance which may interfere with the HomeGuard® Termiflex adhering to the concrete surface.
Note: HomeGuard® Termiflex adheres best to dry concrete surfaces.
- Ensure that all depressions in the concrete surface are filled with HomeGuard® Termiflex to create a complete, uniform and continuous bond and seal.

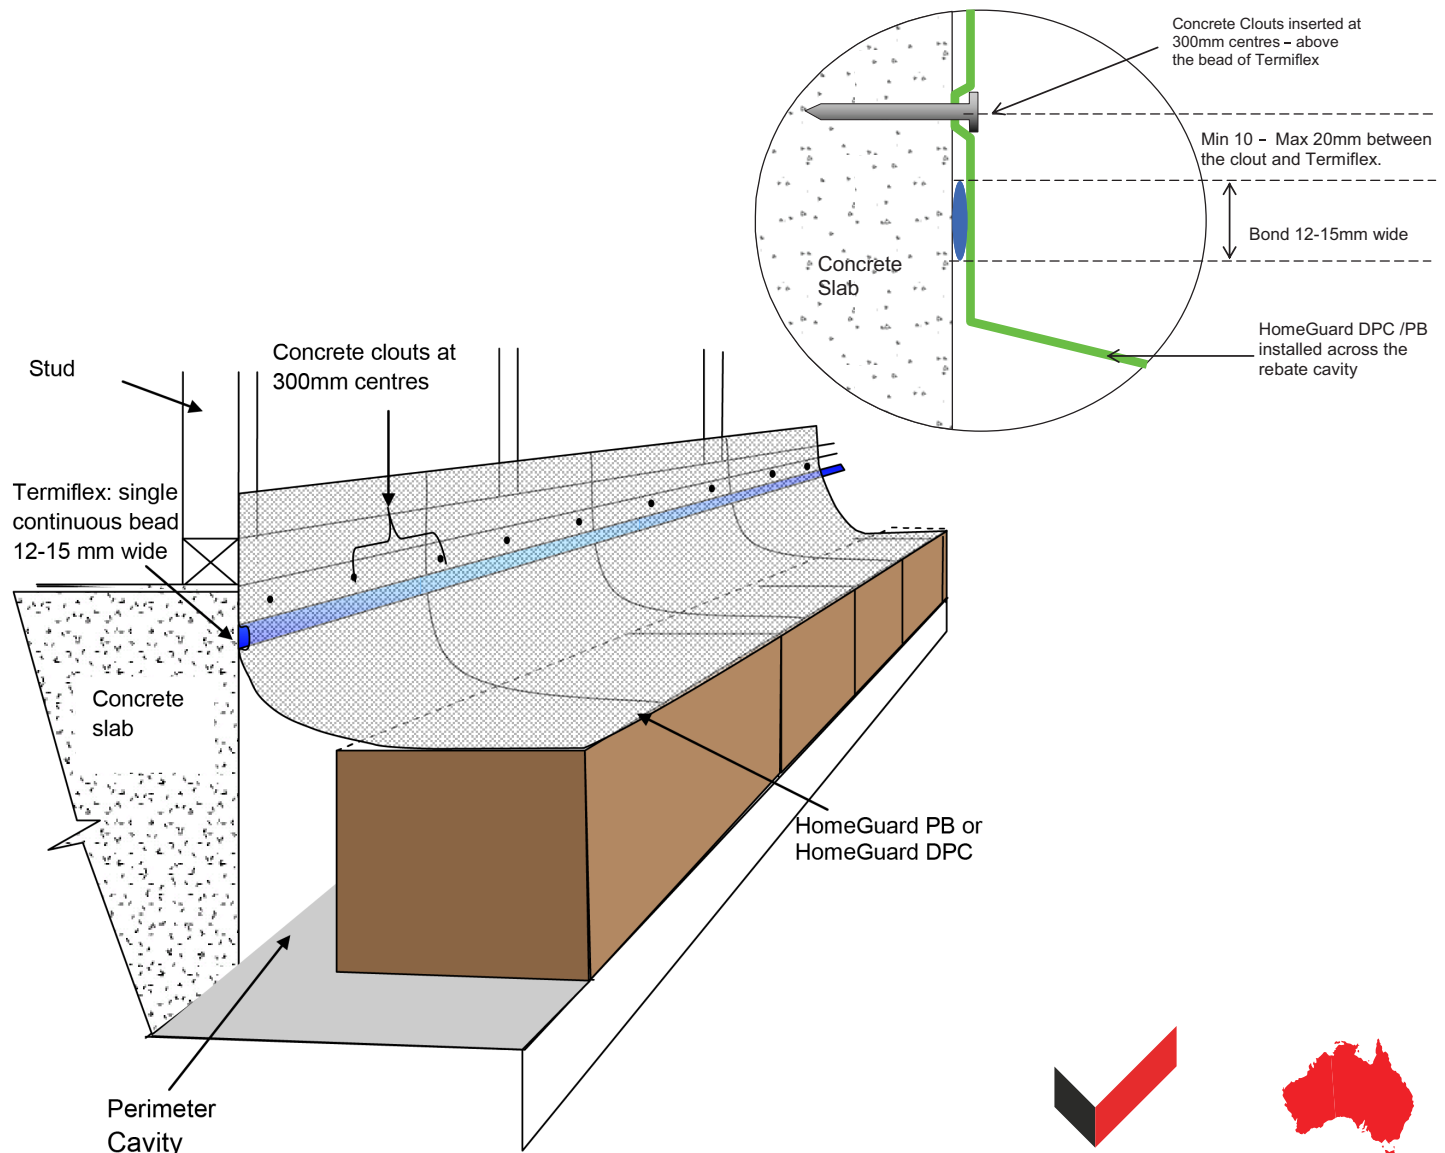

5210062



Manufactured in Australia

Please always refer to the HomeGuard® Installation Manual for further information