


Internal pipe/conduit wrapping

- Wiring conduits and air-conditioning drip pipes that are installed just prior to the pouring of the slab should be wrapped with HomeGuard® sheet to a minimum of 100 mm along the ends of each pipe.
- The wraps should be cable tied and taped as per vertical penetrations.
- HomeGuard® Penetration Warning Tape should be applied to each wrap.

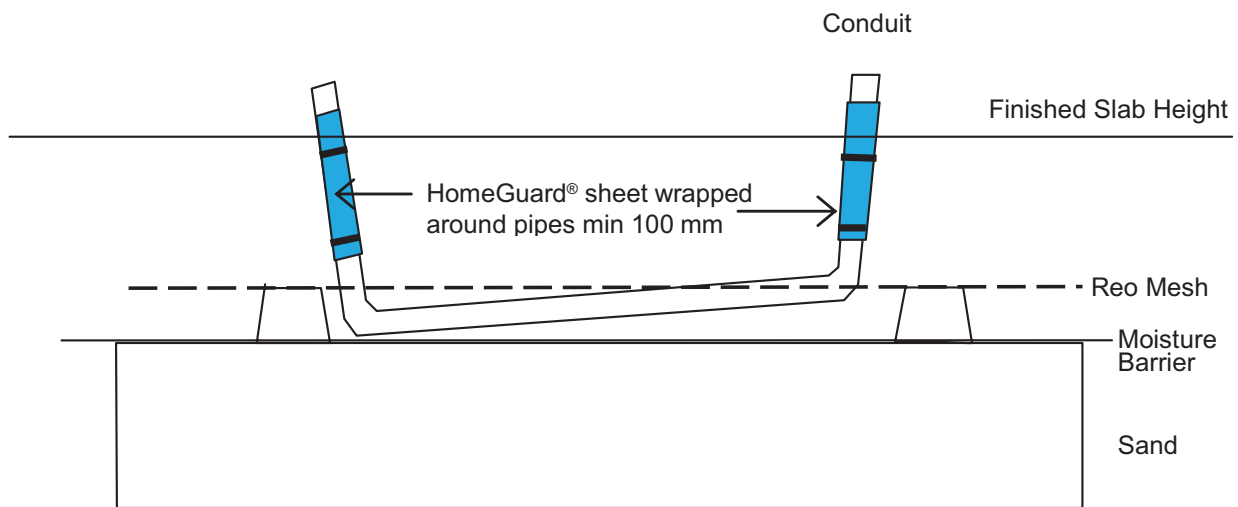

Above image is showing conduit wrapped with HomeGuard TMB.

1121040



Manufactured in Australia

Please always refer to the HomeGuard® Installation Manual for further information