



HomeGuard® Installation Pier Pads

- HomeGuard® PB or HomeGuard® DPC can be used for this installation.
- Ensure surface is clean and free of debris, apply 17 - 20 mm concrete clouts or nails or 40 mm construction duct or cloth tape, and/or 3M Spray Glue, Tensorgrip C40 Hi-Tack adhesive, or Garrards Pre Con 10, to secure the product into place prior to the installation of brickwork, if a clout or gas fired nail is used to help secure the product ensure to cover all nail heads with HomeGuard® Termiflex.
- If bricks are on site, place a brick on-top of the installation in the event the installation is impacted by high winds.
- Be mindful that the installed product should be visible between the slab and brickwork or between the brick courses if the pier is a brick pier on a strip footing.


Concrete slabs

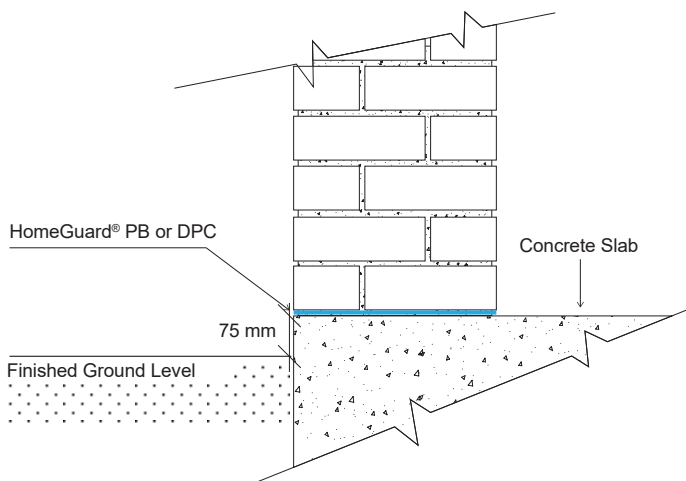

Non-Engaging Brick Pier

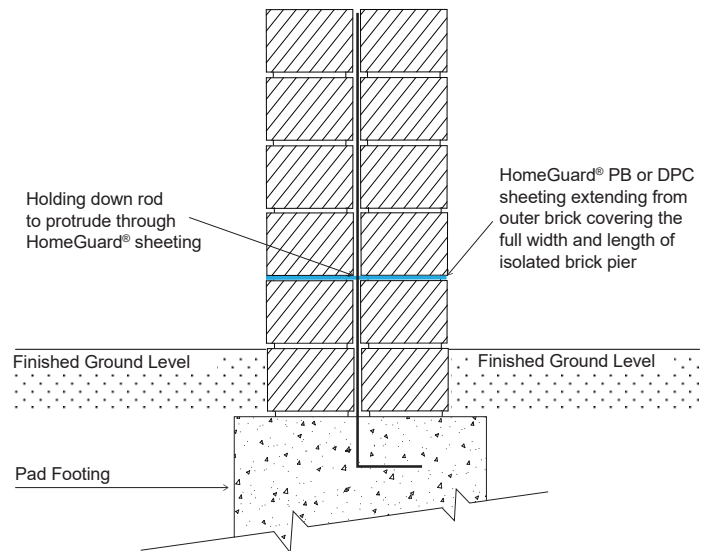

Strip footing

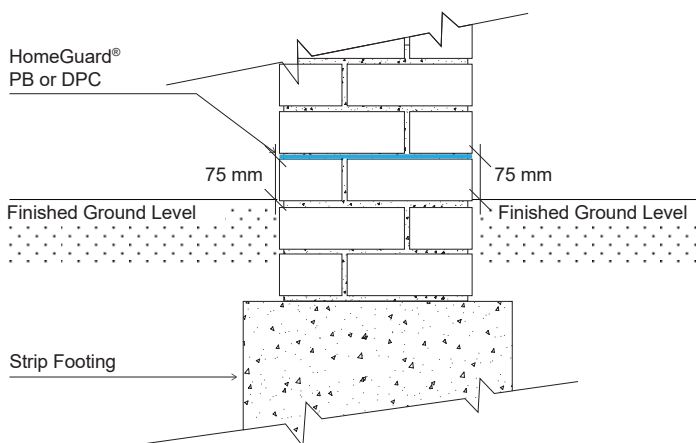

Notes:

- HomeGuard® TMB can not be used in these situations.
- The minimum inspection zone in these situations is 75 mm or 25 mm when it abuts a hard surface.

Please always refer to the HomeGuard® Installation Manual for further information