


Perimeter Cavity Installations


- Adhere the HomeGuard® PB sheet to the top of the slab at 70 mm from the edge using Termiflex.
 - If required, an additional application of spray adhesive and/or concrete nails can be utilised to keep the HomeGuard® PB sheet in place while the Termiflex cures.
- Use of a string line will aid in keeping the sheet straight.
- Ensure there is enough sheet to allow visibility in the mortar under the weep hole.

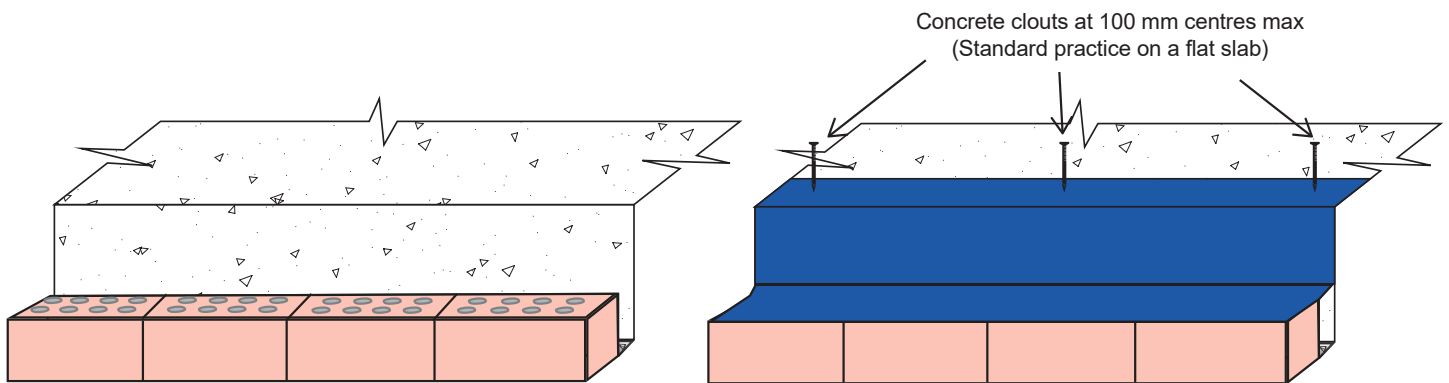

Perimeter with damage

In cases where the concrete slab is not constructed to Australian Standards and there are undulations in the slab edge; follow the steps set out below to ensure that a complete and continuous barrier is maintained:

- Inspect slab, recognise and mark areas of undulation of slab edge.
- Apply HomeGuard® Termiflex to ensure no gaps between the concrete surface and the HomeGuard® PB.
- Depending on the severity of the damage, use closer clout spacing, (e.g. 40 mm) and an additional clout in the undulation.

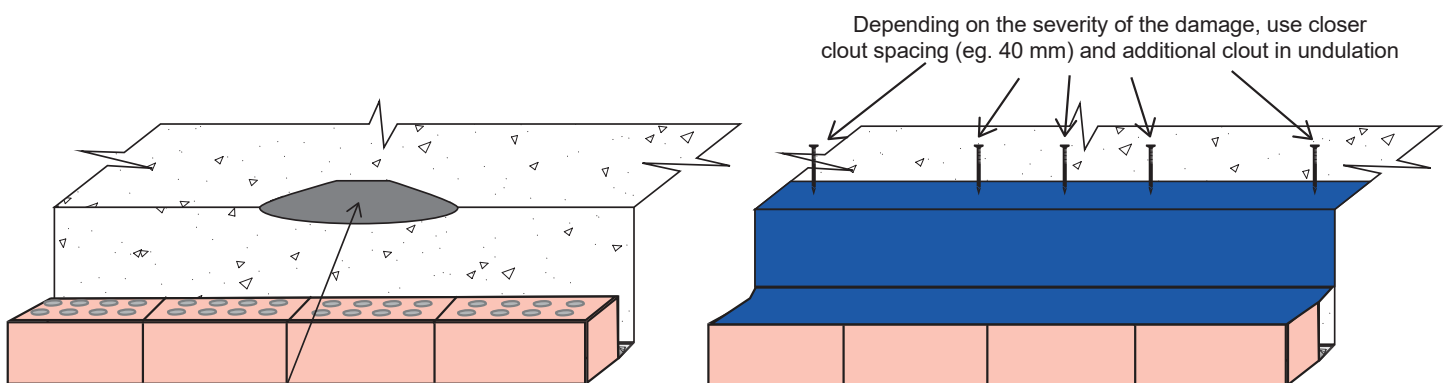

Apply HomeGuard® Termiflex to ensure that there are no gaps between the concrete surface and the HomeGuard®.



Note: Termiflex is a sheet bonding agent not a gap sealer, if slab is not indicative of the images above and damaged deeper than 6 mm contact contractor to repair.

Please always refer to the HomeGuard® Installation Manual for further information