


Cyclone Tie-down Rods

Use the following steps to install patches over starter bars in perimeter situations.

1. Remove all loose and rough pieces of concrete along the perimeter, especially around the Tie-down rods.
2. Unroll the HomeGuard® DPC or PB sheet on top of the slab, along the wall that it is to be installed.
3. Mark the location of each tie-down rod on the sheet.
4. Measure the distance that the rod is in from the outer edge of the block wall and transpose this distance onto the HomeGuard® sheet.
5. Using an 8 mm wad cutter, cut a hole in the HomeGuard® sheet.
6. Using a pair of scissors slit the HomeGuard® sheet from the INNER EDGE to the hole.
7. When all holes have been cut and slit, slide the HomeGuard® sheet into place from the external side edge of the block wall.
8. To make a patch, cut a piece of HomeGuard® sheet 200 mm x 150 mm mark and cut a hole in it with the 8 mm wad cutter.
9. Carefully feed the patch over the tie-down rod and slide it down over the wrap.
10. Tape down all edges of the patch with cloth tape.

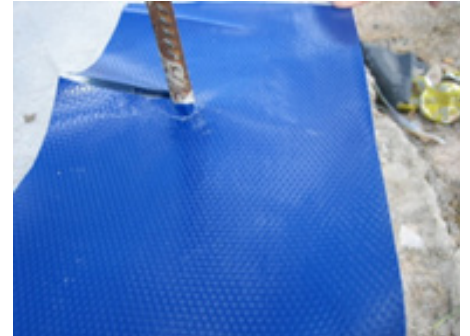

Please always refer to the HomeGuard® Installation Manual for further information